




## Updates

From time to time, it may be necessary to perform updates to your quilting machine's software. When the update screen is open, this is what you will see:

Through this screen, you can update the display and machine software by using a USB drive (with the updated firmware versions) inserted into the USB port at the bottom of the touchscreen.

 **NOTE:** When you need to update both the Machine or Motor and Display software at the same time, **ALWAYS COMPLETE THE DISPLAY UPDATE FIRST.** Then proceed with the Machine update.

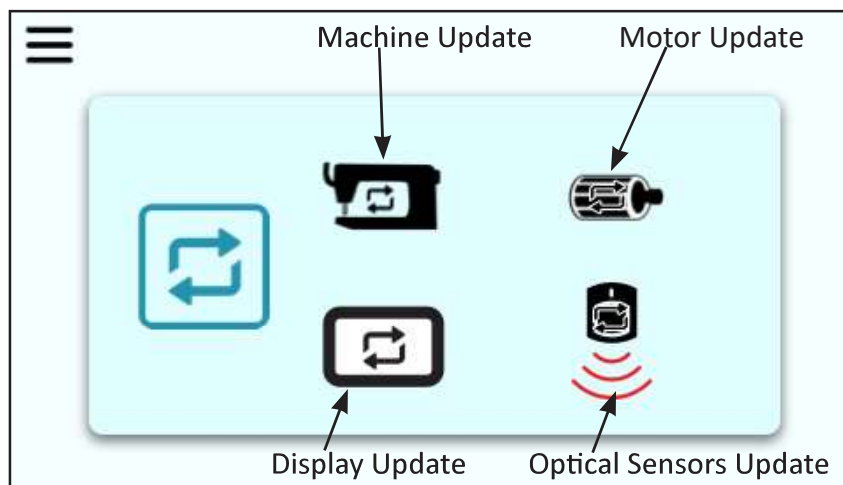

To complete an update, follow these steps:

1. Download the update(s) and save to a USB drive.

For the latest software update, visit <https://handquilter.com/machine-software-updates> and select the Moxie ST tab.

2. Insert the USB drive into the USB port on the bottom of the touchscreen on the Moxie ST.

 
➔ **IMPORTANT:** the download must be unzipped and on the root directory of the USB

✎ **NOTE:** This USB port is used for both the Machine and Display updates.

✎ **NOTE:** When you need to update both the Machine or Motor and Display software at the same time, **ALWAYS COMPLETE THE DISPLAY UPDATE FIRST.** Then proceed with the Machine update.


3. Press the Machine icon, the Display icon, the Motor icon, or the Optical Sensors icon to begin the update.

You will see a progress bar like the one below while the **MACHINE** update is being completed.

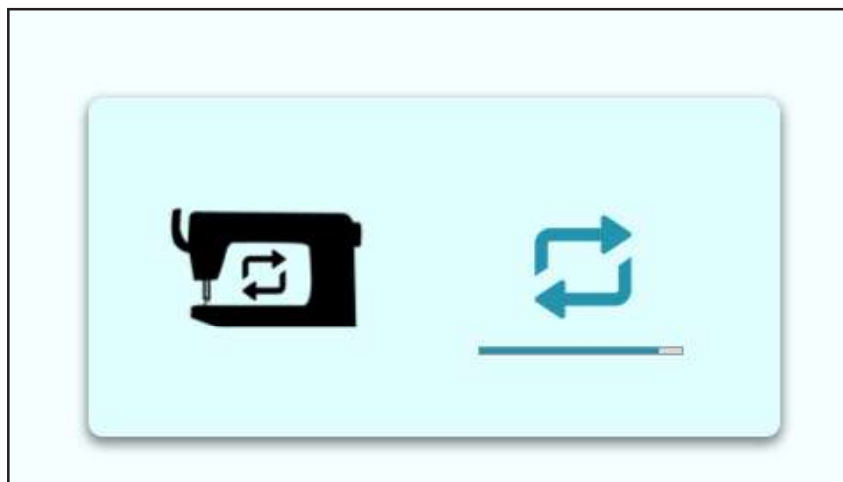

After an update is complete, the display will go dark briefly and reboot to the Home screen.

 If you see either of these icons, there is a problem with either the USB drive or the update file..

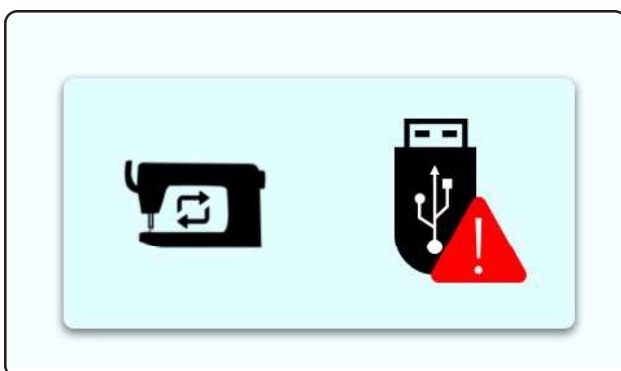

You will see a progress bar like the one below while the **DISPLAY** update is being completed.

After an update is complete, the display will go dark briefly and reboot to the Home screen.

If you see any of these icons, there is a problem with either the USB drive or the update file..

