


Assembly Instructions

QF09348 - Lever Locks

12/15/23

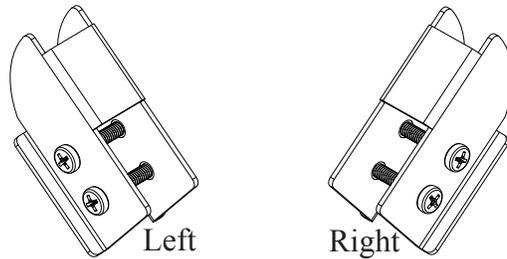

Tools Needed: #2 Phillips Screwdriver

After setting the frame at the desired height install the lever locks.

1. Place two screws through the open hole side of the lever lock into the threaded side. Do not tighten the screws.
2. Place the left lever lock down over the rear left leg lever, aligning the lever on the frame between the two screws on the lever lock.
3. Press down firmly on the lever lock removing any gap between the lever lock and the leg on one side and the lever on the other.
4. While holding down on the lever lock, firmly tighten the top screw, and then the bottom screw with a #2 Phillips screwdriver.
5. Repeat the process on the rear right leg lever.

